


HALOBLINDS

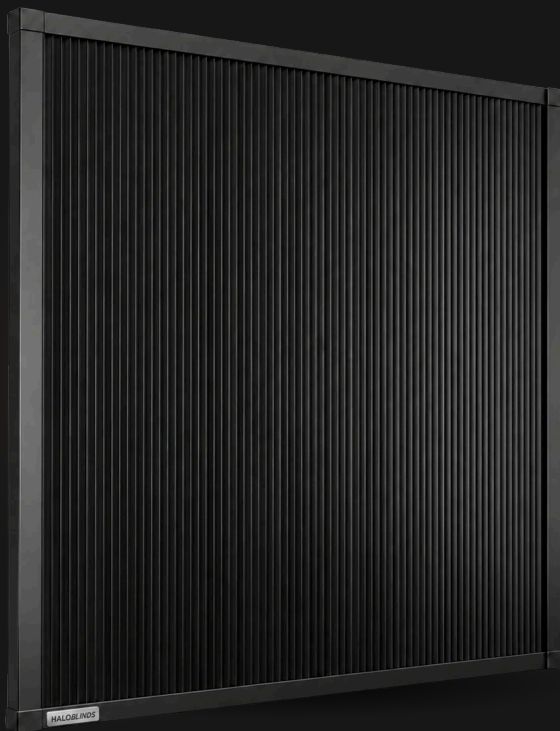

INSTALLATION

**Six steps.
No tools.
No drilling.**

Click the frame together, seal the edges, drop it into the window.

haloblinds.com

Keep for future reference

AT A GLANCE


Everything you're about to do

Three steps on the floor, two to seal it, one at the window.

Nothing to screw, nothing to drill, nothing to patch up when you leave.



1 Lay out the frames

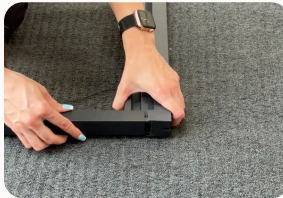

2 Click in one side




3 Click in the others



4 Add the brush strip



5 Add the weather strip

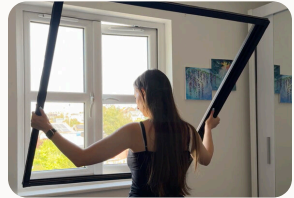

6 Into the window

TIME

About ten minutes per window

HALOBLINDS

TOOLS

None. Everything is in the box

WHERE

Assemble on the floor, near the window

OVERVIEW

1

ASSEMBLE

Lay out the frames



Everything happens on the floor first. Clear a space near the window, roughly the size of the finished blind.

- 1 Unpack all four rails and both sealing strips. Check nothing is missing before you begin.
- 2 Lay the rails out in a rectangle with the **inner channels facing inward**.
- 3 Make sure the internal cord runs **between** the rails, never outside them.

TIP

Work on carpet, a rug or a towel. The frame is aluminium and a hard floor will win.

2

ASSEMBLE

Click in one side



Start at any corner you like. The rails only fit one way round, so if it feels wrong, turn it.

- 1 Line the side rail up square against the top and bottom rail.
- 2 Push it in until you both **hear and feel** it click.
- 3 Press on the corner itself, not halfway along the rail.

TIP

If it won't seat, don't force it. Back it out, square the channels up, and try again.

3

ASSEMBLE

Click in the other sides



Corner 1



Corner 2



Corner 3



Corner 4



Work your way round and click the remaining corners home the same way. With all four connected you have a closed rectangle. Close the blind once to check it latches properly.

CHECK

Run a finger over all four corners. They should sit flush — no step, no gap. Sort it now, not after sealing.

4

SEAL

Add the brush strip



The brush strip is the first of two seals. It runs along the back edge of the frame, all the way round.

- 1 Peel about **ten centimetres** of backing off one end — just enough to get started.
- 2 Press it down at a corner and work along the rail, peeling more as you go.
- 3 Trim the excess, then repeat on the other three sides.



Peel as you go. Exposed adhesive picks up dust, and it only sticks properly once.

KEEP IT LOW

Mount it as low as the frame allows, right against the back edge. Sit it too high and the weather strip has nowhere left to go. Press it into a clean 90° at every corner.

5


SEAL

Add the weather strip



Same technique, one level up. This is the seal that closes the last gap between frame and recess.

- 1 Start at a corner, directly above the brush strip.
- 2 Peel and press along each side, keeping the strip **relaxed** rather than taut.
- 3 Trim at the end, and cover all four sides without gaps.

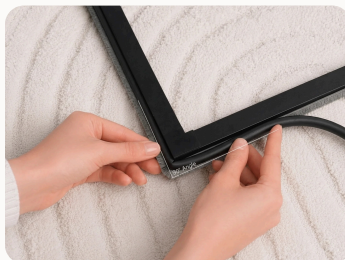

Relaxed into a clean 90°. Pulled tight, it springs back and opens a gap.

CORNERS

Never stretch the strip across a corner. That is where light leaks start.


HALOBLINDS

STEP 5 OF 6

6

INSTALL

Put it in the window

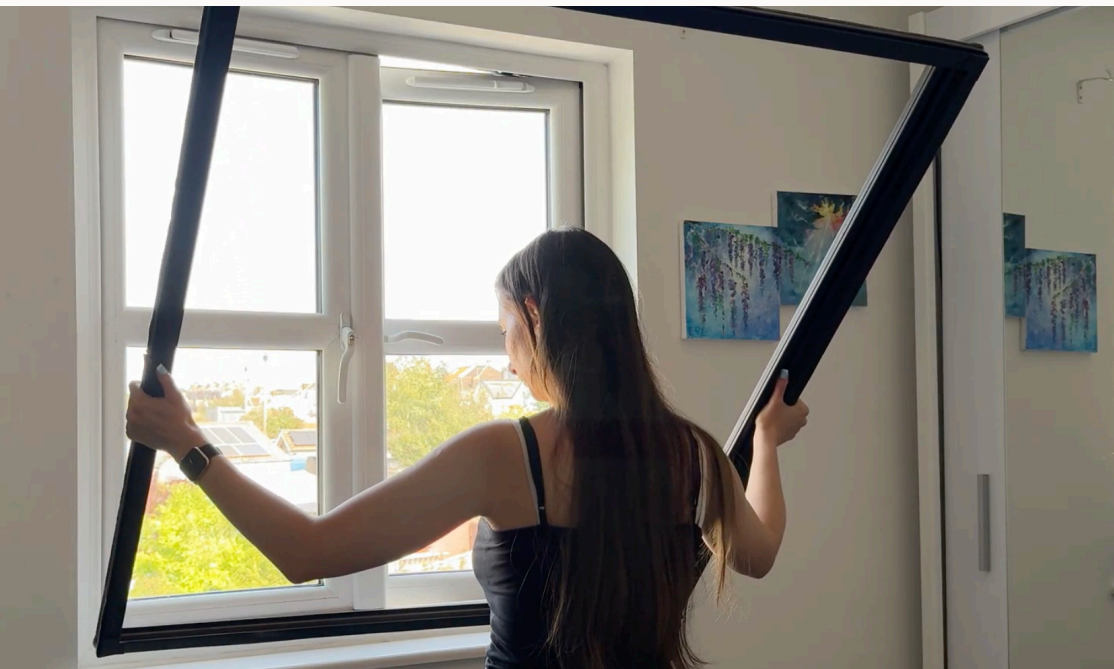

Two hands, one movement. On a wide window a second pair of hands makes this easier.

- 1 Hold the frame at roughly a **70° angle** to the window.
- 2 Guide the bottom into the recess first and push it firmly down.
- 3 Push the top into position until the frame sits flush all the way round.
- 4 Open and close it once to test.

DONE

That's the whole job. No screws, no holes, nothing to fill in when you move out.

HALOBLINDS

STEP 6 OF 6

HALOBLINDS



AND THAT'S IT

Properly dark.

Any light still getting in will be at a corner. Press that corner down firmly and it's gone.

QUESTIONS?

help@haloblinds.com

haloblinds.com